
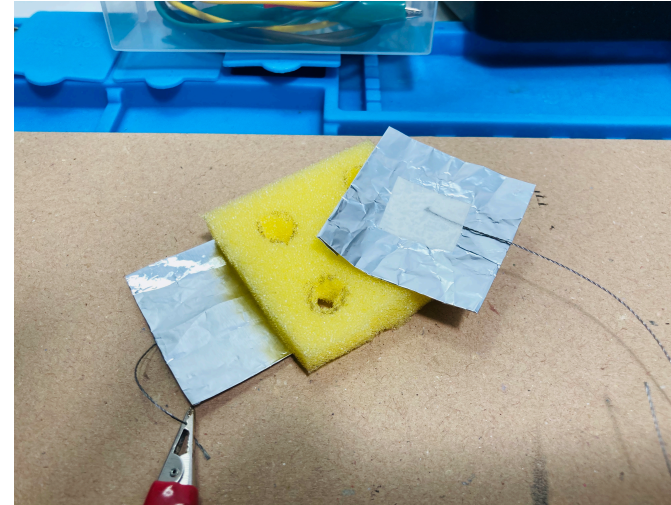


Digital sensor - quick and dirty

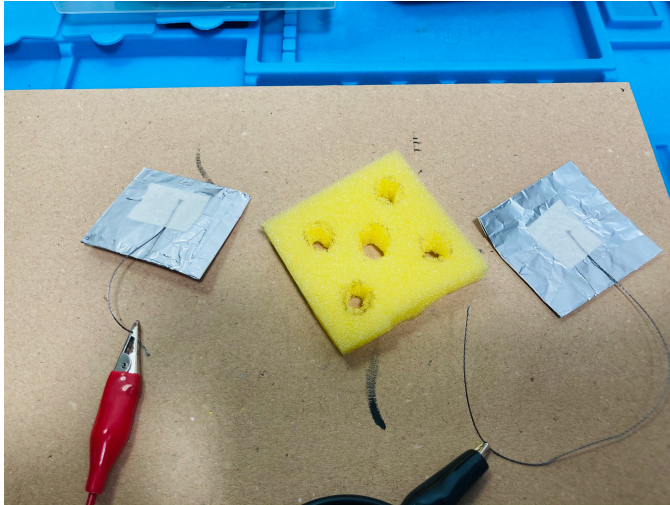

**Aluminium foil
Tape
Conductive thread
Foam with holes**

Create a sandwich with two aluminium foil pads:

- Make two aluminium foil pads.
- Attach to the aluminium pads two pieces of conductive thread.
- Cut a piece of rubber/sponge of the size of the pads.
- Make some holes in the sponge.
- Place the rubber in between the aluminium foil pads.